

ZEBRA PRINTERS SET UP : SUMMARY GUIDELINES



PTS END USER (NO PARKER NETWORK)	PTS EU SUPPORT TEAM	PTS USA IOT
CASE a1	 Send Registration form to PTS USA IOT PTS EU Team create account in PTS and inform end user 	 Create Credentials for Printer/Loftware Sent the above to PTS EU Team
(*) Stand Alone	1 LOFTWARE Licence	
CASE a2	 Send Registration form to PTS USA IOT PTS EU Team create account in PTS and inform end user 	2 Create Credentials for Printer/Loftware 3 Sent the above to PTS EU Team
Stand Alone	1 LOFTWARE Licence (max 2 Printers for 1 licence)	
CASE a3	 Send Registration form to PTS USA IOT PTS EU Team create account in PTS and inform end user 	2 Create Credentials for Printer/Loftware 3 Sent the above to PTS EU Team
USB	2 LOFTWARE Licence	
Stand Alone		
CASE a4	 Send Registration form to PTS USA IOT PTS EU Team create account in PTS and inform end user 	2 Create Credentials for Printer/Loftware 3 Sent the above to PTS EU Team
Ethernet (LAN)	1 LOFTWARE Licence (installed on Client PC/Server) (max 2 Printers for 1 licence)	
 For all the above CASES: * User needs to buy the Hardware and Media as indicated in PTS SUpport Page * Contact PTS EU Team to get PTS Credentials and Printer Credentials (LOFTWARE). * Receive by PTS EU Team the above information and instructions how to install LOFTWARE and Printer set up. * In case of support to activate PTS, the end user has to recontact the PTS EU Team. (1) when buying the printer, please verify if the model is USB only or USB-ETHERNET 	Change of existing Configuration ladding a new printers): (*) Inform PTS USA IOT to add a second printer to the existing LOFTWARE DISTRIBUTOR ACCOUNT	