## **PTS EU – LOFTWARE FOR END USER**

From the PTS support page :

Parker	Dimenticato la parola d'ordine Supporto Italiano [Italian]
Log on to your Parker Tracking System	
🧞 Identifiant Utilisateur	
Parola d'ordine	
Accedi	

Select DOWNLOAD and download the Loftware version for your operating system :

Documentazione	Modello Importaz	tione Kit				
Downloads	Template	Function	Produc	:tUse	Upload Location	
Hardware	Essential Template	Kits	Hose		Search/Create Kit ID	-
Video	Essential Template	Pre print	Hose		Imports	3
Risorse/Links	Import Template	Replacements	Hose/N	on-Hose	Imports	3
Stabilimento Contact Form	Loftware					
	Operating System					
	Loftware Web Client (Windows 7 and below)					
	Loftware Web Client (Windows 8 and 10)					

Once the file is downloaded follow the instructions herewith below :



## CLICK NEXT

Loftware Web Clients - InstallShield Wizard	- • •
Choose Setup Language Select the language for the installation from the choices	below.
English (United States) French (Standard) German Spanish	
InstallShield	ack Next > Cancel



**Click Next** 



## NEXT

Loftware Web Clients Setup	
Language Selection Choose the desired Language for the Loftware Program	s
Select the language for the l from the choices below. English English French Separate	oftware Applications
German	
InstallShield	
K B	ack Next > Cancel

Select the language

Loftware Web Client Program Install	
Setup will install Loftware Web Clients in the foll	owing folder.
To install to this folder, click Next. To install to a another folder.	different folder, click Browse and select
Destination Folder	
Destination Folder C:\Program Files (x86)\Loftware Clients	Browse
Destination Folder C:\Program Files (x86)\Loftware Clients	Browse
Destination Folder C:\Program Files (x86)\Loftware Clients	Browse

**Click Next** 

oftware Web Clients Setup	
Loftware Web Client Program Install	1
Choose the Loftware Web Client Program(s) you w Web On Demand Print Client Web ActiveX control (WebX) Web Listener Service	vish to install Description Prompt operator for Labels and Data to print. Connects to the LPS across the Internet.
8.58 MB of space required on the C drive 13113.91 MB of space available on the C drive stallShield	

Select the check boxes as shown above .

At the end of the installation , re-start the PC if requested.

AFTER the reboot

Go to Programs and select Loftware Clients , then select Web Listener - Configuration



## Select Configure Connection

Lot	ftware Web Listene	r Configuration Util	ity		×
	-General Configuratio URL: http	n ://labels01.parker.co	m		
H	Port: 80				
H	Username: Da	niel			
	Configure Connect	ion Diagnostic	s Language		
Lr	Device Configuration	n			
	Device Name	Device Alias	Port	LLM-Number	Configurati
	Loftware ∠ebra R	. DSF-01	USBU22: Zebra Lec	201	IRL
	•				Þ
	Configure	Disable			
	Log Configuration – Enable I	nteractive Log	🗖 Enable	Event Message	Log
			ОК	Cancel	Apply

Change the le info in the URL and Port fields as per instructions received by e- mail and as mask below



Enter the password and confirm password received by the e-mail related to the Loftware, click OK.

User Password		23
Password:		
Confirm:		
	OK	Cancel

Enter user name received by e-mail

General Configuration	×
URL: http://labels01.parker.com Port: 80	Proxy Info.
User Name:	Password
Please provide the proper connection information as requested above. At minimum, the Loftware Web Listener requires a Valid URL, Username,	Security Info.
If you are connecting through a proxy server, please provide valid proxy information as well by clicking on the "Proxy Info." button.	Web Server
If the Loftware Web Listener is currently running, please stop the Loftware Web Listener before clicking Next.	Push Servlet
Next->	Cancel

Click NEXT.

The system will download the new Loftware configuration:

Connect	ion Status
	Contacting The Loftware Print Server
	Connected to the Web Server
	Contacted the Loftware Push Servlet
	Contacted the Loftware Print Server
	Downloading Device Configuration(s)
Errors E	ncountered:
	*
	Ψ

You will be then addressed to the following mask then click Port

Loftware Web Listener	Configuration Utili	ity		×
General Configuration	://labels01.parker.co	m		
Port: 80				
Username: Dan	iel			
Configure Connection	on Diagnostic	s Language		
Device Name	Device Alias	Port	LLM-Number	Configuratio
Loftware Zebra R	DSF-01	USB022: Zebra Tec	201	TRI
				-
Configure	Disable			
Log Configuration	terretive Lee		F	
	iteractive Log	L Enable	Event Message	Log
		ОК	Cancel	Apply

Click on the drop-down menu and select your printer which is usually on the USB port with the name Zebra Technology Gk420T or ZM400 or ZT410.

Device Configuration for Loftware Zebra	a R110Xi
Local Device Local Port:	Configure
C IP Device IP Address: COM1: COM2: COM3: COM4:	
Test Device	OK Cancel Apply

If the printer is connected to the network enter ( in not present) the IP address.

Then click OK on both masks .

Device Configuration for Loftw	are Zebra F	R110Xi		×
Cocal Device Local Port:				Configure
C IP Device IP Address:	COM1: COM2: COM3: COM4:		^ 	
Test Device	0.014.	OK	Cancel	Apply

oftware Web Lister	er Configuration Utili	ity		×	
🗖 General Configural	ion				
URL: h	http://labels01.parker.com				
Port: 8	80				
Username: D	aniel				
Configure Conne	ction Diagnostic		1		
Device Configuration					
Device Name	Device Alias	Port	LLM-Number	Configurati	
Loftware Zebra F	DSF-01	USB022: Zebra Tec	201	TRL	
•	<				
Configure	Disable				
Log Configuration					
🔲 Enable	Enable Interactive Log		Event Message	Log	
		ОК	Cancel	Apply	

Start the Web Listener. You are now able to print PTS labels.

- Loftware Web Liste	ner		
<u>W</u> eb Listener	<u>Options</u>	<u>H</u> elp	
2014/04/11 11:53:03	.0640] Web Listener	Log Opened	
Start	Stop		Exit